

RACER'S CHOICE™

100% Stainless Steel Cat-Back



Installation Instructions for 96-04 4.6L GT & 96-98 4.6L Cobra Part # TK8604



Parts Included:

- 2- 2½" Flow Tubes
- 2- 2½" Muffler Sections
- 2- 2½" Down Tubes
- 2- 3½" Stainless Tips
- 2- Exhaust Clamps
- 8- 7/16" Studs and Nuts



Start by removing your stock exhaust system. Once removed install both flow tubes as shown. Do not tighten.



Install the MAC mufflers into the stock location as shown. Do this for both side of the system. Do not tighten.



Install both of the down tube to the MAC mufflers as shown. Do not tighten. Note: Both of the down tubes are the same.



Install the hanger into the stock location and slide the tip into the down tube then the hanger as shown.




Repeat the same process for the other side as shown



Align the MAC exhaust system and tighten starting at the flow tubes.



Align both tips and tighten. Start and check for leaks.

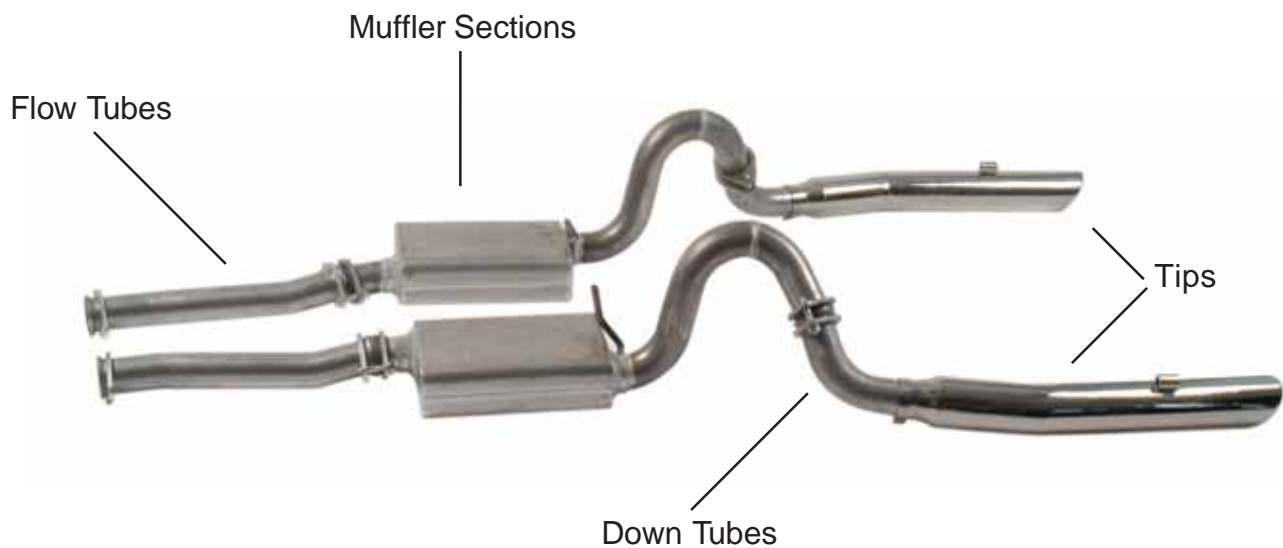

Need to contact us?

Visit us on-line at www.macperformance.com for information on the latest products and updates for your existing products. You can also call us at 800-367-4486, fax your request to 951-296-3044 or email tech@macperformance.com.

If you experience problems with any MAC Products, please contact us immediately. A return authorization number should be requested for any merchandise being returned.

Thank you for purchasing MAC!

**• MAC • 43214 Blackdeer Loop • Temecula, CA 92590 • www.macperformance.com •
• Local & Tech Support (951)296-3077 • US 800-367-4486 • Fax (951)296-3044 •**